

LINEAR HIGH BAY

J-LHB09®



FEATURES AND SPECIFICATIONS

Construction

- Super compact design using, die-cast housing
- The compact design save labor cost and improves installation efficiency.
- Die-cast aluminum housing features a rock-solid quality and performance

Optics

- Light engines are available in color selectable version, the CCT can be changed to three CCTs (4000K, 5000K).
- Superior Performance, Up to 150lm/w

Electrical

- Universal 120-277VAC input voltage.
- Wattage adjustable: 165W/150W/130W
- Output constant current lever can beadjusted through output cable with 0-10V Operating
- Temperature Range: -30°C to 50°C.
- Note: Operating with emergency battery temperature range: 0°C to 50°C

Installation

- Surface mount(Optional).
- Steel wire rope mount (default).

Controls

- Optional Microwave sensor.
- Emergency power supply can be added

Applications

- subtle aesthetic that meets most office ceiling application needs, It is ideal for office spaces,supermarkets, and meeting rooms.

Life Span

- Estimated 50,000-hour LED lifespan based on IES LM-80 results and TM-21 calculations. 5years warranty

Certifications

- UL DLC damp location listed

Model	Power /W	LPW (lm/w)	Max.Lumens /LM	CCT /Kelvin	Sensor	Input Voltage
J-LHB09-165WBML1A2	165/150/130W	150lm/w	23,100lm	4000/5000K	Sensor base	AC120-277V
J-LHB09-220WBML1A2	220/200/180W	150lm/w	30,800lm	4000/5000K	Sensor base	AC120-277V
J-LHB09-300WBML1A2	300/275/255W	150lm/w	42,000lm	4000/5000K	Sensor base	AC120-277V


Ordering Guide

Example: J-LHB09-165WBML1A2

Brand	Wattage xxxW	Manufacturer of LEDs	Diffuser Type	Manufacturer of LED Driver
ONE SOURCE LIGHT	130W 150W 165W	B=Manufacturer of LEDs Lumileds 2835	M= Matte Lens	L=Lifud Driver CCT: 4000K/5000K


LINEAR HIGH BAY

Detail

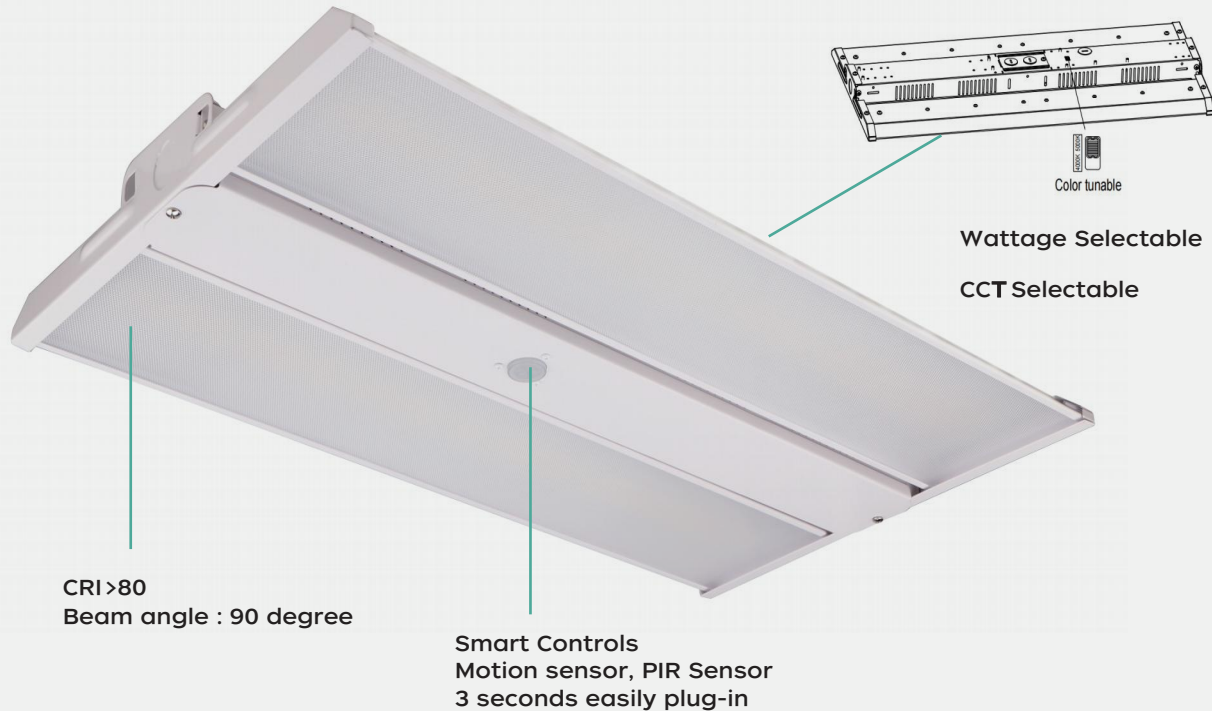

Flexible Installation Options

We offer a variety of mounting options to meet all application needs, including steel wire rope mount (default), Surface mount (optional). Conduit pendant mount (optional).

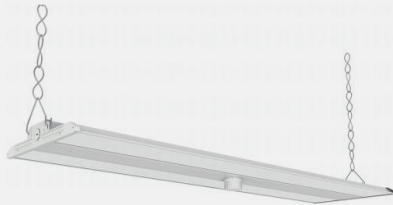

Chain Installation




Surface Installation



Steeve Installation

LINEAR HIGH BAY

Dimensions

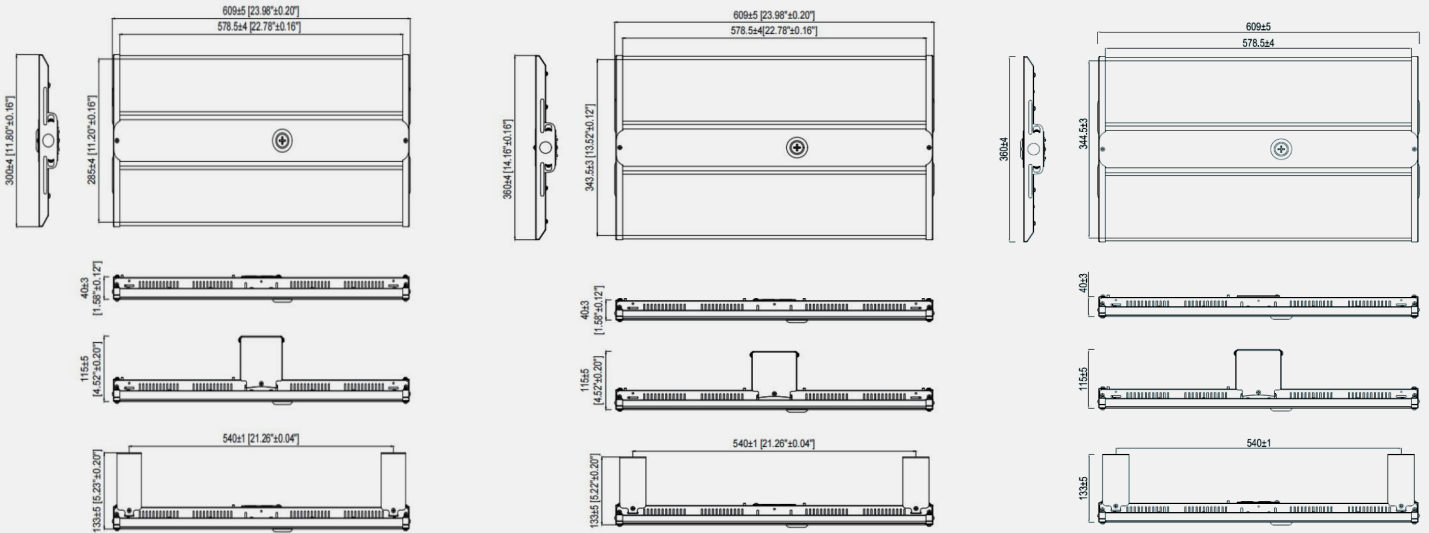

Part No.	Part No.	Part No.	Part No.
J-LHB09-165WBML1A2	23.98"(609.09mm)	11.80"(299.72mm)	1.58"(40.13mm)
J-LHB09-220WBML1A2	23.98"(609.09mm)	14.16"(359.66mm)	1.58"(40.13mm)
J-LHB09-300WBML1A2	23.98"(609.09mm)	14.16"(359.66mm)	1.58"(40.13mm)

Accessories



Iron chain
(Default)



Iron hook
(Default)



Ceiling Box
(Factory)



Ceiling mounting
(Factory)




Sensor



Emergency driver

Photometrics

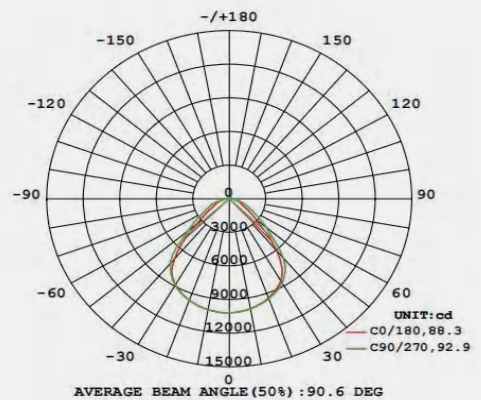

LINEAR HIGH BAY

Installation Instruction

A. Hanging Installation: (Chain/Cable)

Step1. Hook up the chain; (Figure 1)

Step2. Connect the chain with fixture; (Figure 1)

Step3. Fix the chain on the rail, adjust the chain length as per need; (Figure 1)

Step4. After fixed, choose suitable wiring knock out, connect the wires according to local standard and code.

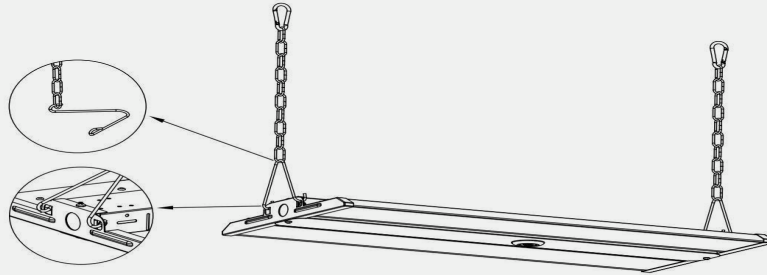


Figure 1

B. 3/4" NPT Installation:

Step1. Mount the bracket on 3/4" NPT; (Figure 2)

Step2. Lock fixture on the bracket; (Figure 3)

Step3. Connect the wires according to local standard and code.

Step4. Lock side brackets with screw driver. (Figure 4)



Figure 2

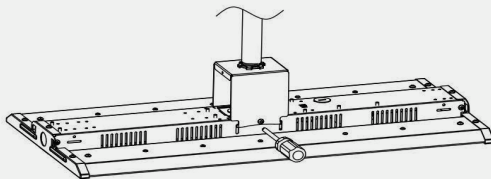


Figure 3

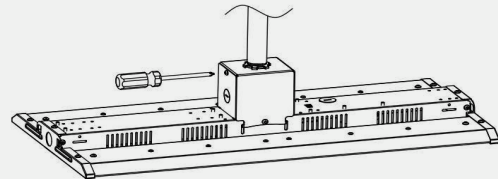


Figure 4

C. Surface Mounting: (If this bracket is used for the fixture, backup driver solution cannot be chosen)

Step1. Mount the bracket on the rail or ceiling; (Figure 5)

Step2. Assemble the lamp on the bracket and fix it with screws; (Figure 6)

Step3. After mounting, choose suitable wiring knock out and connect the wires according to local standard and code.

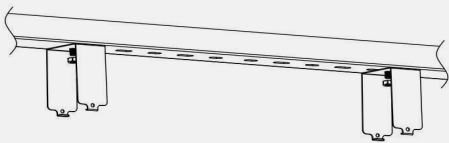


Figure 5

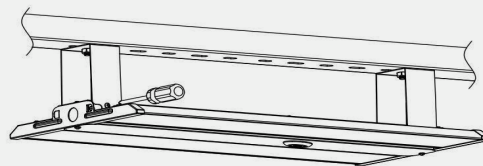


Figure 6

LINEAR HIGH BAY

Extra Accessory Option Installation: 1:Wire Guard, 2:Motion Sensor / PIR Sensor,3: Backup driver

1.Wire Guard: (Purchase the correct size wire guard from manufacturer)

Step1. Unscrew the two screws on the front of the lamp; (Figure 7)

Step2. Place the wire guard on the lamp and fix it with screws. (Figure 8)

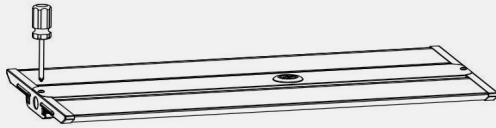


Figure 7

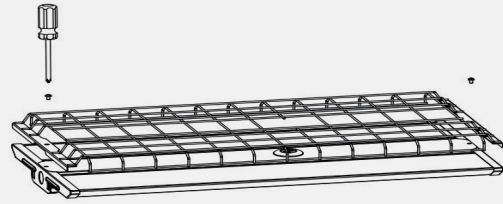


Figure 8

2-2. DC Motion Sensor / PIR Sensor (Both sensors are with the same installation method)

Step1. Use a screwdriver to remove the 1/2 plug from the sensor; (Figure 12)

Step2. Twist-lock the DC sensor to the base to make it work properly, use a remote control to adjust the working mode as per demand. (Figure 13)

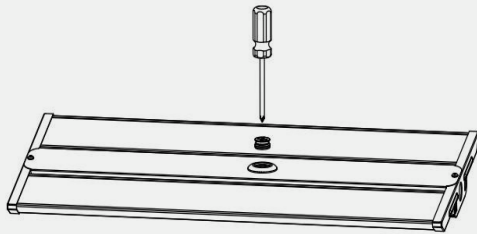


Figure 12

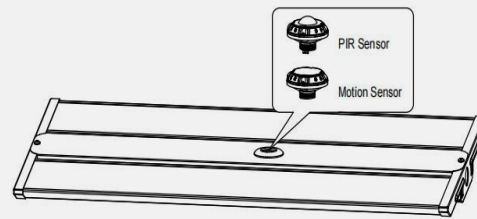


Figure 13

3: Backup driver

Step1. Connect the wires according to the wiring diagram. (Figure 14)

Wiring diagram (Maintained)

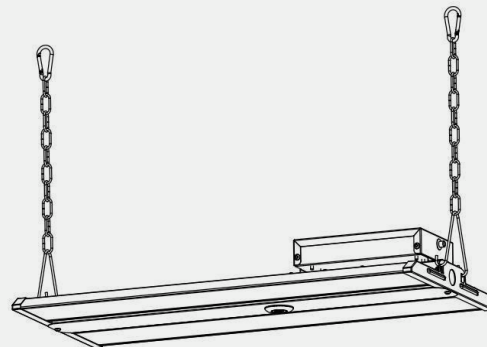
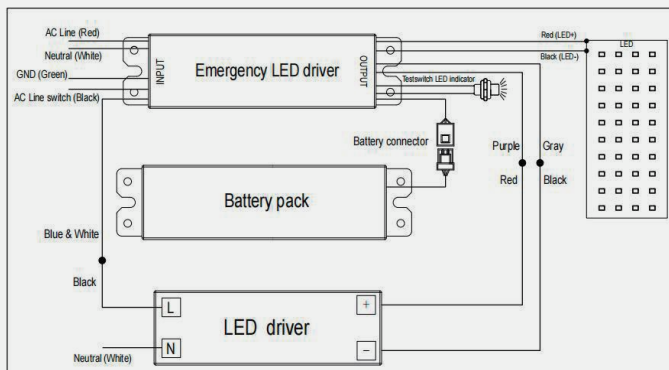


Figure 14

LINEAR HIGH BAY

Packing/Weight

Part NO.	Outer Carton Size (LxWxH)	Qty/Carton (pcs)	Net weight (kg/lbs)	Gross weight (kg/lbs)
J-LHB09-165WBML1A2	25.9x12.6x2.76 inches	1	3.4/7.5	3.54/7.8
J-LHB09-220WBML1A2	25.98 x 14.96 x 2.76 inches	1	4.04/8.91	4.2/9.26
J-LHB09-300WBML1A2	25.98 x 14.96 x 2.76 inches	1	5.49/12.1	5.72/12.6